

# Pyxis<sup>®</sup>

## PowerPack Series


*Uniquely designed to provide additional power budget & wireless communication to drive Pyxis Lab<sup>®</sup> Inline Sensors to ANY receiving microprocessor controller or PLC with limited power supply. Available in Single-Channel, Dual-Channel or Four-Channel input & output connection adapters.*

### **Package Includes:**


- PowerPack™ Bluetooth<sup>®</sup> Auxiliary Adapter
- Necessary Flying Lead Cable(s)
- Necessary 485 Cable(s)



## Single-Parameter Sensor Wiring Guide

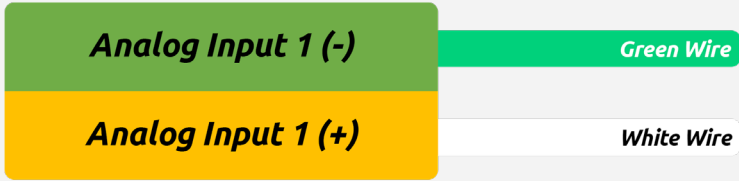

## Dual-Parameter Sensor Wiring Guide

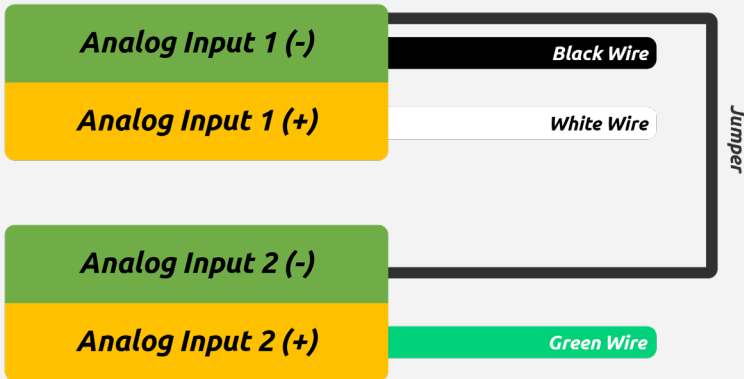

- 1 Plug your Sensors into P1–P4
- 2 Plug your Provided Cables into C1–C4
- 3 Terminate Accordingly

